

User Guide



IMPORTANT SAFETY INSTRUCTIONS:

- Please read User Guide before using this product.
- Please keep User Guide for future reference.
- Please read the cautions to prevent possible danger and loss of property.

FEATURES:

- High resolution: 1920×1200;
- Wide voltage: DC 7-24V;
- High brightness: 500cd/m²;
- High contrast: 1000:1;
- SDI and HDMI cross conversion;
- Integrated recording info. display;
- Metal housing.


CAUTIONS:

1. Please do not place the display screen towards the ground.
2. Please avoid heavy impact or drop onto the ground.
3. Please do NOT use chemical solutions to clean this product. Please wipe with a clean soft cloth to maintain the brightness of the surface.
4. Please do not block any vent hole.
5. Please follow the instructions and trouble-shootings to adjust the product. Other improper adjustment may result in damage. Any further adjustment must be performed or conducted by a qualified technician.
6. Please unplug the power and remove the battery if long-term no-use, or thunder weather.

Contents

1. PRODUCT DESCRIPTION	2
2. DV BATTERY MOUNT PLATE.....	3
3. MENU SETTING	5
7. ACCESSORIES	9
8. PARAMETERS.....	10
9. TROUBLE SHOOTING.....	10

1. PRODUCT DESCRIPTION

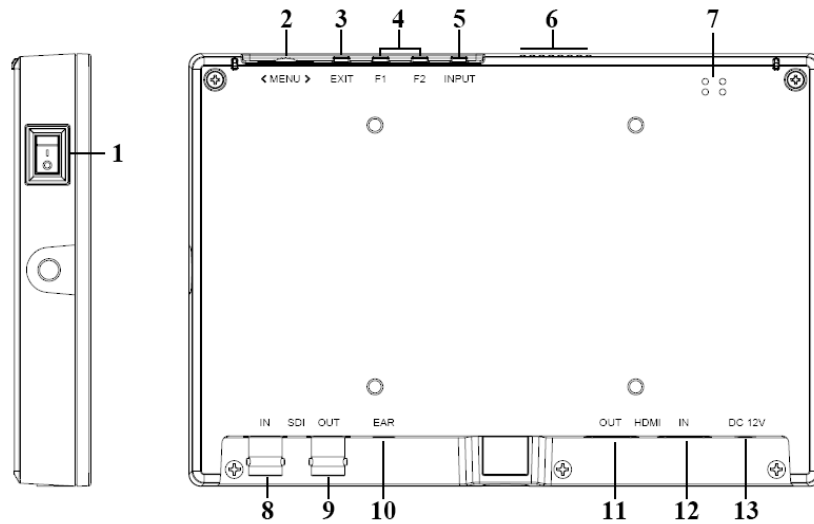

- 1 . Power ON/OFF: “○” is power OFF; “|” is power ON.
- 2 . MENU Dial: Turn the dial to adjust volume;
Menu function: press to activate menu displayed on screen when power on.
Option function: select option via dialing to the left or right.
Confirm function: press to confirm after option selected.
- 3 . EXIT
- 4 . F1、 F2、 User-definable buttons.
Default functions: (function customized to meet your needs)
F1 Waveform F2 Scan
- 5 . INPUT: circularly switch among of SDI and HDMI.
- 6 . Fan cooling holes
- 7 . Speaker
- 8 . SDI input interface.
- 9 . SDI output interface.
- 10 . Earphone jack.
- 11 . HDMI output interface.
- 12 . HDMI input interface.
- 13 . DC 12V power input.

2. DV BATTERY MOUNT PLATE


Standard mounts process




Following three types of battery plates are suitable for this device, model F970, QM91D, DU21 & LP-E6 (choose 2 out of 4).



MODEL: F-970

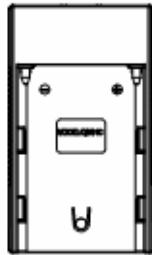

MODEL: QM91D

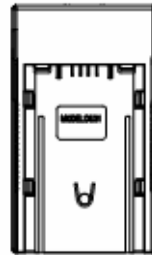

MODEL: DU21



MODEL: LP-E6

DV Battery Mount Plate:

DV Battery Mount Plate Specification:


Model DU21 for battery of Panasonic DV:
NV-GS/PV-GS/DZ-MV/GS/H28/H258/H288GK series, comply with
Panasonic battery DU06/VBD140/SANYO DZhs301sw/Hitachi
DZ-HS303SW/BZ-BP14S/DZ3200/BP07W.

Model QM91D for battery of SONY DV:
DSCR1/F/S/MVCCD/E/HC15E/HC1E/AE1u/DCRTRV828/E/CCD-TRV
116/DCR-DVD/PS105K/300K/10P/1E series.


Model F970 for battery of SONY DV:
DCR-TRV series, DCR-TRV E series, VX2100E PD P series, GV-A700,
GV-D800 FD/CCD-SC/TR3/FX1E/HVR-AIC, HDR-FX1000E, HVR-Z1C,
HVR-V1C, FX7E F330.

Model LP-E6 for battery of Canon DSLR:
5D Mark II/5D Mark III/EOS7D/EOS60D;

V-mount battery plate (optional): Please refer to GP-L130AB type battery specifications.

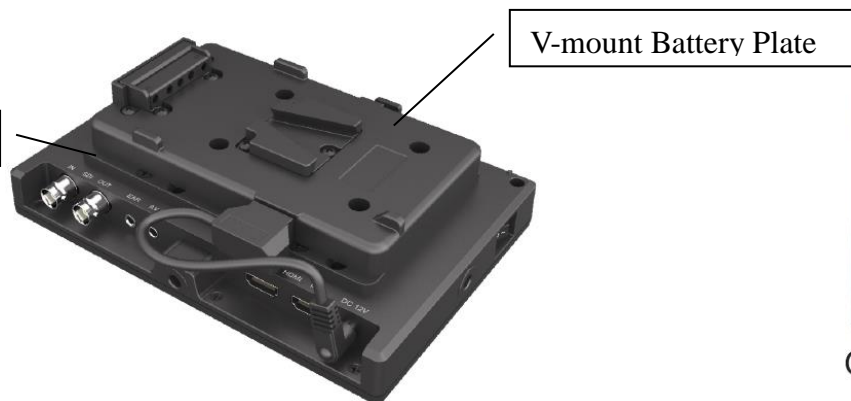

Anton Bauer mount battery plate (optional): Please refer to GP-L130B type battery specifications.

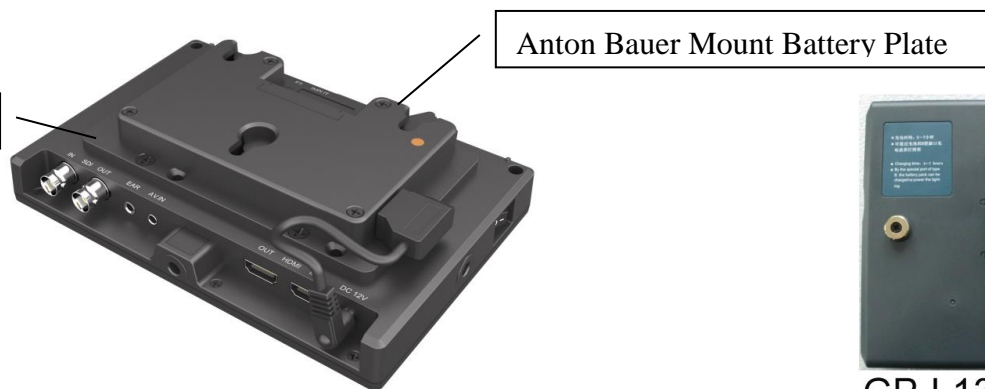

3. MENU SETTING

Before setting the functions, please make sure the device is connected correctly.

3-1. Shortcut keys:

3-1-1. the image menu

Dialing to the left or right when power on, brightness will appear at the bottom of the screen, then press the dial to switch among of brightness, sharpness, contrast, saturation, volume, tint, MENU and Exit. User can adjust the value of the selected option via the dial.

3-1-2. F1-F2 2 user-definable function buttons:

Long press any F1-F2 key for 3-5 seconds to pop-up shortcut menu directly. As shown in Figure (default menu button in white font).

Select option via dialing to the left or right.

Press to confirm option as default, then press EXIT to exit.


Functions of F1-F2 buttons can also be customized: Center Marker, Aspect Marker, Check Field, Underscan, Scan, Aspect, DSLR, Freeze, H/V delay, Peaking, False Color, Exposure, Histogram, Level Meter, Waveform and Time Code.

F1-F2 : 2 user-definable function buttons

Default function:

F1 Waveform

F2 Scan

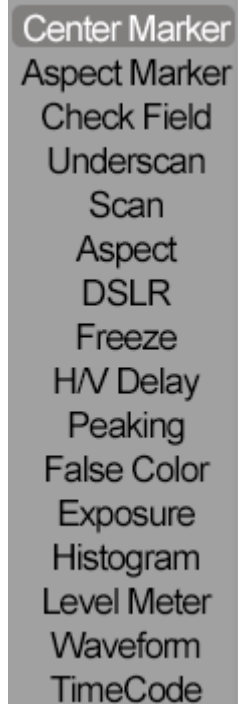








 
 
Center Marker
Aspect Marker
Check Field
Underscan
Scan
Aspect
DSLR
Freeze
H/V Delay
Peaking
False Color
Exposure
Histogram
Level Meter
Waveform
TimeCode

3-2. MENU Operation

When power on, press “**MENU**” on the device. The menu of function setting will display on the screen.








Dialing left or right to choose menu, and press to confirm, and then press EXIT to return.

3-2-1. Picture

PICTURE		
	Brightness	50
	Contrast	50
	Saturation	50
	Tint	50
	Sharpness	0
	Color Temp	User
	Red Gain	128
	Green Gain	128
		▼▲





 

ITEMS	OPTIONS		
Brightness	0 – 100		
Contrast	0 – 100		
Saturation	0 – 100		
Tint	0 – 100		
Sharpness	0 – 100		
Color Temp	5500°K /6500°K/7500 °K/9300 °K/User		
	Red Gain	0 – 255	Note: Available only under “User” mode to choose the color value you need.
	Green Gain	0 – 255	
	Blue Gain	0 – 255	
	Red Offset	0 – 511	
	Green Offset	0 – 511	
	Blue Offset	0 – 511	

3-2-2、Marker

MARKER		
	Center Marker	OFF
	Aspect Marker	OFF
	Safety Marker	OFF
	Marker Color	Red
	Marker Mat	OFF
	Thickness	2
		







ITEMS	OPTIONS
Center Marker	OFF, ON
Aspect Marker	OFF, 16:9, 1.85:1, 2.35:1, 4:3, 3:2
Safety Marker	OFF, 95%, 93%, 90%, 88%, 85%, 80%
Marker Color	Red, Green, Blue, White, Black
Marker Mat	OFF, 1– 7
Thickness	2, 4, 6

3-2-3、Function

FUNCTION		
	Scan	Zoom
	Aspect	Full
	Underscan	OFF
	H/V Delay	OFF
	Check Field	OFF
	Zoom	60%
	Freeze	OFF
	DSLR	OFF
		▼▲
		

ITEMS	OPTIONS
Scan	Zoom, Aspect, Pixel TO Pixel (Options can be adjusted only under scan mode.)
Aspect	Full, 16:9, 1.85:1, 2.35:1, 4:3, 3:2
Underscan	OFF, ON
H/V Delay	OFF, H, V, H/V
Check Field	OFF, Red, Green, Blue
Zoom	10%~90% (step value is 10%)
Freeze	OFF, ON
DSLR	OFF, 5D2, 5D3
3G Format	Normal, GBRA444 10Bit, YCbCrA444 10Bit, YCbCrA422 12Bit, GBR444 12Bit, YCbCr444 12Bit (Available under SDI mode only.)


3-2-4、Waveform

WAVEFORM		
	Waveform	Multi
	Peaking	OFF
	Peaking Color	Red
	Peaking Level	50
	False Color	OFF
	Exposure	OFF
	Exposure Level	85
	Histogram	Y
		▼▲
		

ITEMS	OPTIONS
Waveform	Multi、Y、YCbCr、RGB、OFF
Peaking	OFF, ON
Peaking Color	Red, Green, Blue, White
Peaking Level	0 – 100


False Color	OFF, ON
Exposure	OFF, ON
Exposure Level	0 – 100
Histogram	Y, RGB, Color
Time Code	OFF, LTC, VITC (available under SDI mode only.)

3-2-5、AUDIO

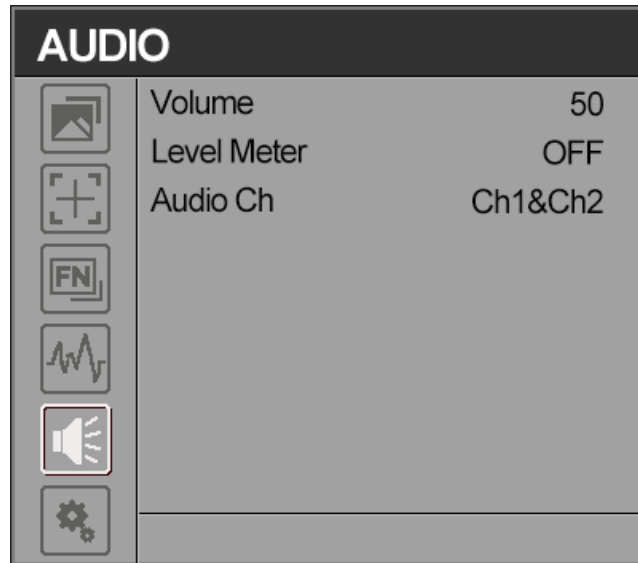

ITEMS	OPTIONS
Volume	0 – 100
Level Meter	OFF, ON (default as on under waveform multi function.)
Audio Ch	Ch1&Ch2, Ch3&Ch4, Ch5&Ch6, Ch7&Ch8, Ch9&Ch10, ChH11&Ch12, Ch13&Ch14, Ch15&Ch16 (available under SDI mode only.)

3-2-6、SYSTEM

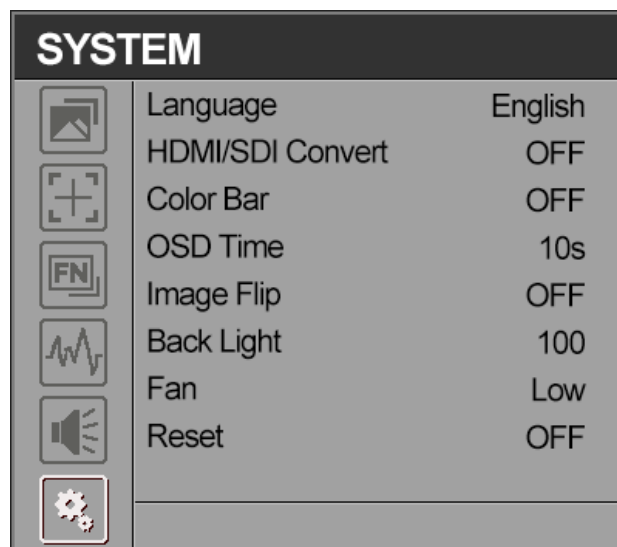

ITEMS	OPTIONS
Language	English, Chinese

HDMI/SDI Convert	OFF, ON
Color Bar	OFF, 100%, 75%
OSD Timer	10s, 20s, 30s
Image Flip	OFF, H, V, H/V
Back Light	0 – 100
Fan	Low, High
Reset	OFF, ON

***HDMI/SDI cross conversion function can realize signal transmits from SDI input to HDMI output and from HDMI input to SDI output.**

7. ACCESSORIES

Standard:



- | | |
|--|---------|
| 1. Folding sun shade cover | 1 piece |
| 2. HDMI A/C cable | 1 piece |
| 3. Shoe mount | 1 piece |
| 4. VESA battery plate | 1 piece |
| 5. Battery plate(QM91D, DU21, F970, LP-E6) | 2 piece |
| 6. Battery Plate bracket | 1 piece |
| 7. 12V DC adapter | 1 piece |
| 8. Manual | 1 copy |

Optional:



- | | |
|----------------------|---------|
| 1. Anton Bauer mount | 1 piece |
| 2. V-mount | 1 piece |
| 3. Battery | 1 piece |

8. PARAMETERS

Panel	7"
Aspect Ratio	16:10
Physical Resolution	1920×1200 (324ppi)
Brightness	500 cd/m ²
Contrast	1000: 1
Viewing Angle	170°/ 170°(H/V)
Input Voltage	DC 7-24V
Input Signal	3G-SDI, HDMI
Power Consumption	≤13W
Operating Temperature	-20°C~60°C
Storage Temperature	-30°C~70°C
Dimension (LWD)	182×124×22mm
Weight	405g

9. TROUBLE SHOOTING

1. Only black-and-white display:

Check whether the color saturation is properly setup or not.

2. Power on but no pictures:

Check whether the cables of 3G-SDI and HDMI are correctly connected or not. Please use the standard power adapter coming with the product package. Improper power input may cause damage.

3. Wrong or abnormal colors:

Check whether the cables are correctly and properly connected or not. Broken or loose pins of the cables may cause a bad connection.

4. When on the picture shows size error:

Press "MENU → FUNCTION → Underscan" to zoom in/out pictures automatically when receiving HDMI signals

5. Other problems:

Please press "MENU" button and choose "MENU→SYSTEM→ Reset →ON"

6. According to the ISP, the machine can not function properly:

ISP for program upgrades, non-professionals do not use. Please reboot your device if press accidentally!

Note: due to constant effort to improve products and product features, specifications may change without notice.

